



Instructions For Eckman Heavy Duty 3mx3m Easy Gazebo



Please keep these instructions in a safe place for future reference

Any questions or problems - please call the Eckman Helpline on 0871 590 5917 or go to www.eckman.co.uk

Thank you for purchasing this Eckman product. Please take care when unpacking and especially if using scissors or a knife for opening the packaging. Check for any obvious damage and that all parts have been supplied

Deluxe Easy-Gazebo Model Ref. EEGD

Contents

Canopy & Frame , 2 x side walls each with 3 arched windows, 1 x side wall without window, 1 x front panel with zipper door, Ground Sheet , Guy Ropes , Pegs, Carry Bag with Wheels

Specifications

Erected Dimensions : 3m x 3m x 3.2m high

Cover Material : 600D Cotton PVC Coated For Water-Resistance

Side Walls Material : 3m x 2m 210D Cotton PVC Coated without Waterproofing

(2x side each with 3 arched windows + 1x side wall without window + front panel with zipper door)

Frame Construction :

White Powder Coated Steel with 30x30mm outer/25x25mm inner Legs & 12x22x0.5mm Supporting Ribs

Ground Sheet : 3m x 3m 600D Cotton PVC Coated For Water Resistance

Any questions or problems - please call the Eckman Helpline on 0871 590 5917 or go to www.eckman.co.uk

How to Erect Your Gazebo


A) Setting Up

“When either erecting or taking down your gazebo, please follow these instructions carefully so as to avoid pinching your hands or fingers in any of the moving parts !”


“ Two people are required to erect this gazebo.”

1. Take the Gazebo in the carry bag to the place where you intend the gazebo to stand. Remove from carry bag.


2. With your partner on the opposite side, firmly grasp two outer legs, slightly lift the frame off the ground (See Pic 1.) and take a step backwards, stopping with your arms fully outstretched.

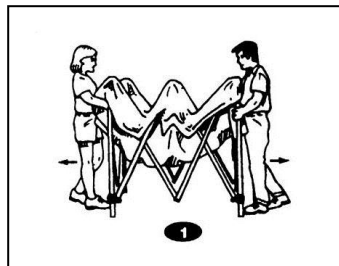

3. When viewing the partly erected canopy in the shape of a diamond rather than a square, you and your partner should move to opposite corners of the diamond. Each of you should grasp the leg, then step backwards until the shelter is fully opened (See Pic 2). Take special care not to pinch your fingers whilst doing this and do not pull backwards too hard as this could bend the side supports.

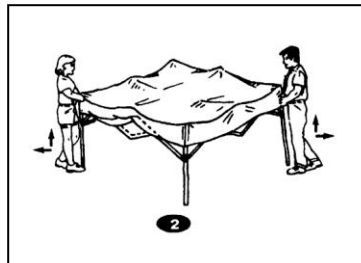


4. Engage the slider at each corner by pushing up with one hand while holding down the top of the leg with the other hand. A snap button will engage in the locating hole (see Pic 3 together with picture above it). Repeat this operation with the remaining legs.

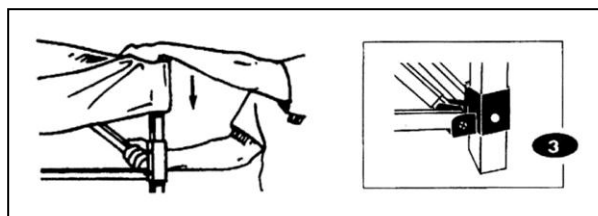

Any questions or problems - please call the Eckman Helpline on 0871 590 5917 or go to www.eckman.co.uk

5. You should both then place a peg on footplate of the bottom of the closest legs and lift up the legs, sliding the inner legs out until the snap button locks in the locating hole. Repeat this operation for the remaining two legs.

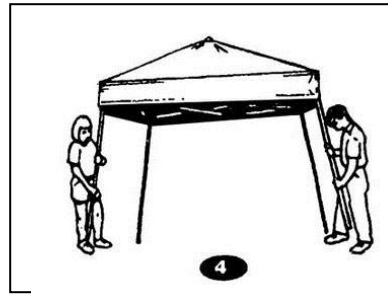


6. Square up the gazebo and attach the Velcro tabs (located on the underside of the top cover) around the frame struts.

7. Use the guy ropes attached to the ring at each corner of the roof cover and ground stakes to secure the gazebo to the ground. There are also holes provided in each of the feet at the base of each leg to fit further ground stakes (not supplied). For extra safety we suggest these are utilised as well as the guy ropes and ground stakes provided. Should there be any possibility the gazebo will become unstable due to high winds, immediately take the gazebo down. Do not attempt to erect the gazebo in a high wind.


8. Fixing side Walls to Frame

As you can see from illustrations 5 and 6, you have complete flexibility in how you use the side walls, so for differing situations or events you can change the design to however you want it. Fig 5. Shows the gazebo with jst 2 side walls fitted, one with a window and one without. In this particular case, it's probably you want the gazebo as open as possible but want to use it also as a wind break. Alternatively, you may want as much protection and privacy as possible so in this instance you will want to fit all walls including the zipper door as shown in fig 6. Use the Velcro tabs supplied to fit the side walls to the frame. Use the heavy duty water-resistant groundsheet whenever required.

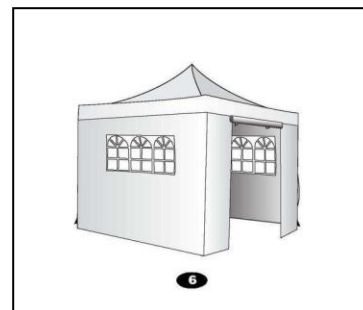


B) Taking Down



1. Remove any leg stakes and guy ropes. Undo the Velcro tabs from around the frame.
2. You and a partner should each lift two adjacent outer legs slightly off the ground and depress the snap button. Then immediately push the telescopic inner legs up and into the outer legs (See Pic 7). Repeat the procedure for the remaining two legs.

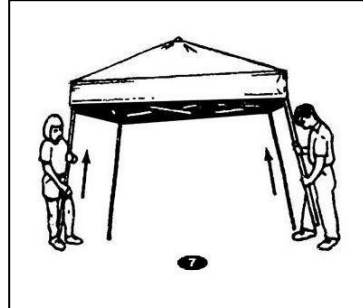

3. Release the slider at all four corners with a slight upwards pressure with one hand whilst depressing the snap button to release the slider with the other hand (See Pic 8 with pic above). Push sliders down past the snap button.

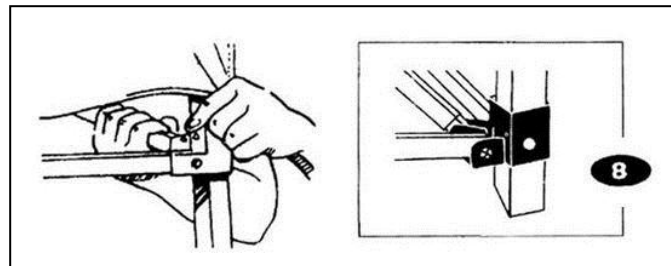

4. Each partner should grasp the top of the diamond (See Pic 9.) on opposite sides and slightly lift the up the gazebo. Shake the gazebo slightly to loosen up the joints. Pull hands apart while stepping towards your partner until the gazebo is three quarters closed (See Pic 10.)

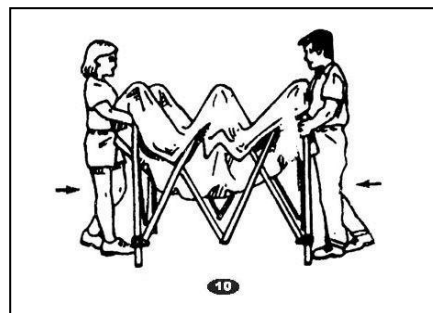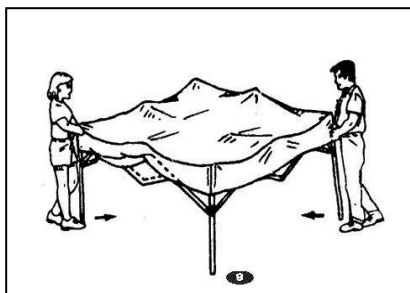

5. Grasp the two outer legs, lift slightly off the ground and gently push together to fully close. Take care not to catch your fingers !

GUARANTEE. This product is guaranteed against faulty workmanship for a period of 12 months from the date of purchase. Your guarantee will be invalidated should you misuse, abuse, or modify this product in any way. This guarantee only covers domestic use and does not cover commercial use. You will be required to provide proof of purchase should you need to make a claim. Your statutory rights remain unaffected.

Any questions or problems - please call the Eckman Helpline on 0871 590 5917 or go to www.eckman.co.uk