



ELECTRIC TELESCOPIC HEDGE TRIMMER OWNER'S MANUAL



IMPORTANT: Read and understand this manual before assembling or operating this Trimmer. Improper use can cause severe injury. Keep this manual for future reference.




For more great products visit www.technologyinthehome.com

Contents

- I Parts List
- II- Technical Data
- III-Safety Instructions
- IV-Getting Started
- V- Operation
- VI- Cleaning, Maintenance, storage and guarantee.

I Parts List

- 1. 450mm long Reciprocating Heat-Treated Dual Cutter Blade
- 2. Pivoting Power Head
- 3. Pivoting Knob for cutting head
- 4. Pivoting knob for shaft
- 5 . Telescopic shaft
- 6. Telescopic shaft lock
- 7. Auxiliary Handle
- 8. Trigger switch lock out
- 9. Handle
- 11. Trigger switch
- 12. Shoulder strap
- 13. Power Cord

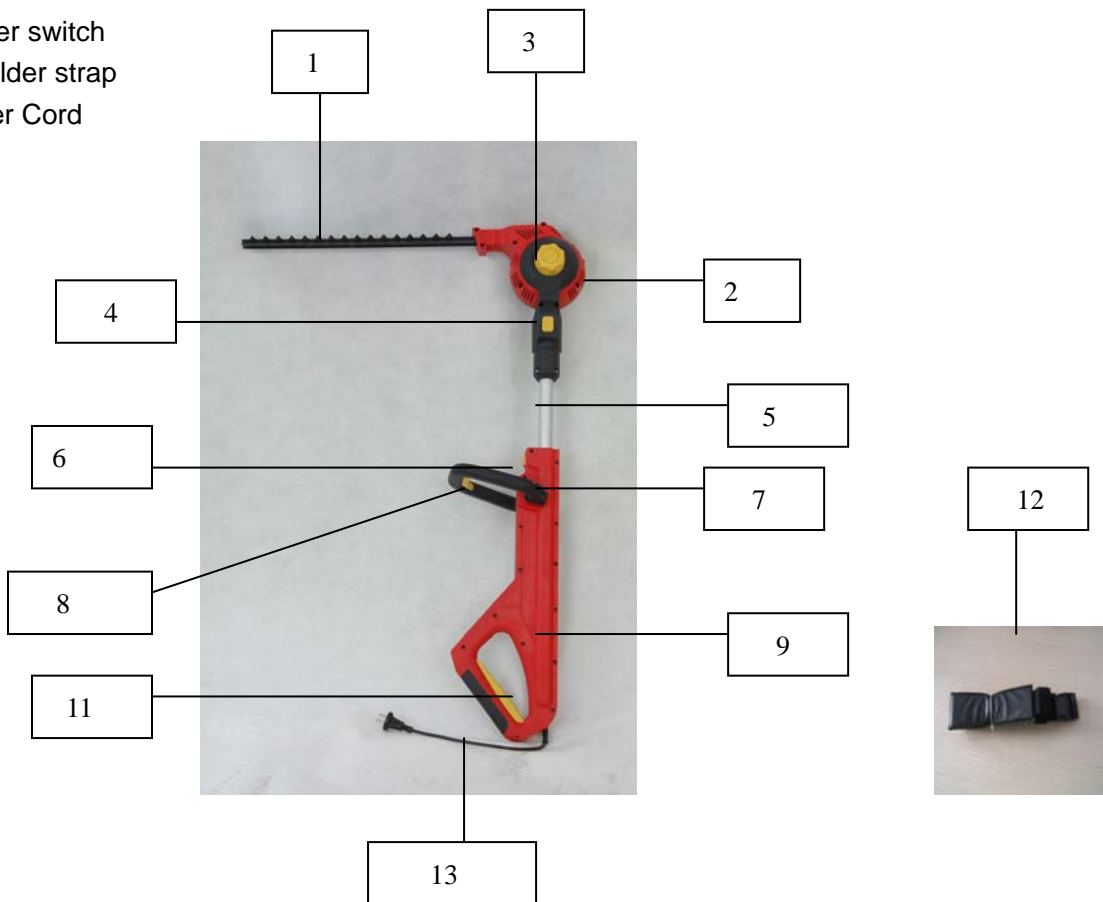

II. Technical Data

Rated Voltage: 230v- 240v- 50hz

Input Power: 450w

Idling Speed: 1500rpm

Cutting Capacity 14mm diameter

Weight: 4.5 kg

NOISE AND VIBRATION DATA











Weighted sound pressure level: 79dB

Weighted sound power level: 96dB

Vibration: 3.5M2/S

Overall length 1.60m / Overall length fully extended 1.93m

SYMBOLS

	Do not expose to rain.
	Denotes risk of personal injury, loss of life, or damage to the tool in case of non-observance
	Read the user manual
	Use ear protection
	Use eye protection
	Use protective gloves
	Wear sturdy, non-slip footwear
	Disconnect from mains power immediately if the power cord becomes damaged
	Do not operate near electric lines
	Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice

III. SAFETY INSTRUCTIONS

WARNING: When using electric Trimmers, basic safety precautions should always be followed to reduce the risk of personal injury.

Read all instructions carefully prior to operating this trimmer.

1. **Stay Alert----** Watch what you are doing. Use common sense when operating Trimmer.

2. **Avoid Dangerous Environments**

Do not operate Trimmer In rain or in damp or wet locations.

While under the influence of alcohol, medications, or drugs.

Where highly-flammable liquids or gases are present.

While standing on a ladder or in a tree.

If it is damaged or not securely and fully assembled.

3. **Keep Children Away---**Keep all visitors a safe distance from work area.

4. Do not use Trimmer for any job except that for which it is intended.

5. Only well instructed adults should operate Trimmer. Never allow children to operate Trimmer.

6. **Dress Properly When Operating Trimmer**

Do not wear loose clothing or jewelry that can get caught in the moving blades or parts of the Trimmer.

Always wear rubber gloves and substantial foot wear when working outside.

Always wear protective hair covering to contain long hair.

Always wear a face or dust mask if operation is dusty.

7. Always wear eye protection

8. Use only electrical voltage noted on model nameplate on Trimmer.

9. **Extension Cord-----**Make sure your extension cord is in good condition. When using an extension cord(<6amp), be sure to use one heavy enough to carry the current your Trimmer will draw. An undersized extension cord will cause a drop in line voltage resulting in loss of power and overheating.

10. Do not operate Trimmer near electric power lines, telephone, or cable lines. Keep Trimmer at least 10 feet away from any power lines or cables.

WHILE OPERATING TRIMMER

1. **Stay Alert---** Watch what you are doing. Use common sense.

2. Be aware of extension cord while operating Trimmer. Be careful not to trip over extension cord. Keep extension cord away from cutter blades at all times.
3. **Avoid Unintentional Starting** —Do not carry plugged-in Trimmer with finger on switch. Be sure switch is OFF when plugging in Trimmer.
4. **Do Not Over-reach**-----Keep proper footing and balance at all times.

DANGER----RISK OF INJURY

Keep hands away from blades at all times. Keep both hands on handle areas when Trimmer is on. Do not attempt to remove cut material or hold material to be cut when blades are moving. Do not grasp the exposed cutting blades or cutting edges when picking up or holding the Trimmer.

CAUTION----Blades coast after switching off.

5. **Disconnect Trimmer**----Disconnect the Trimmer from the power supply

When not in use

Before servicing

When changing accessories such as blades

When clearing jammed material from blades

When moving from one worksite to another

6. **Do Not Force Trimmer**—It will do the job better and with less likelihood of a risk of injury.
7. **Do Not Abuse Power Cord**--- Never carry Trimmer by power cord or yank it to disconnect from the mains power supply . Keep power cord away from heat, oil, and sharp edges
8. Before starting Trimmer, make sure blades are not touching anything.

IV. GETTING STARTED

UNPACKING

1. Remove Trimmer and all other items from box.
2. Check all items for shipping damage. If you find any damage or any parts are missing, promptly inform the dealer where you bought the Trimmer.

The Trimmer comes with below accessories.

Blade Cover x 1pc Blade x 1pc

3.The cutter blade must be assembled onto the trimmer before operation. To Assemble the cutter blade, follow the instructions below :-

- A. Loosen screws on the blade cover and then remove the cover. See. Pic.A
- B. Loosen screws on the inner cover and then remove the cover. See. Pic. B.

C. Remove gear unit, then put it into the blade slot, making sure that the gear surface and the Blade surface are on the same level. See pic. B&C

WARNING : BE CAREFUL NOT TO DROP SCREWS INTO THE PLASTIC BODY OF THE TOOL.

Put the blade unit into the cutting head, making sure that the shaft is put into the inner of the gear. and The blade been installed must face to wheel gear. See Pic. D

The gear case is lubricated with grease at the factory and it does not require checking. If disassembled for any reason, lubricated with a little grease,.

IMPORTANT: Do not overfill the gear case, since damage to the seals could result. Clean hands with warm soapy water to remove the grease.

Put the blade holder into the slot of the cutting head, making sure that the two holes of the holder line up with the two holes of the slot. See. Pic E,F,and G.

D. Cover the inner cover and fix it firmly with the 4 x 10mm self-tap[ping screws, making sure that the screws are fixed firmly. See Pic H.

E. Screw the 2x20mm long Philips head bolts complete with plastic spacers and washers into the holes. See Pic. I&J

F. Replace the outer plastic cover by re-fixing the 6 x 15mm long self-tapping screws. See Pic.K& L




Pic A



PIB



Pic. C

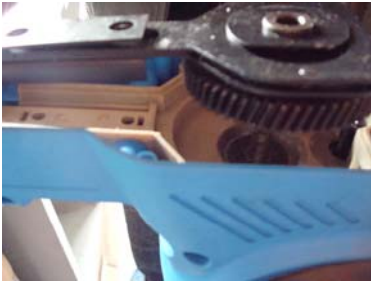

PIC D




PIC E



PIC F



PIC G

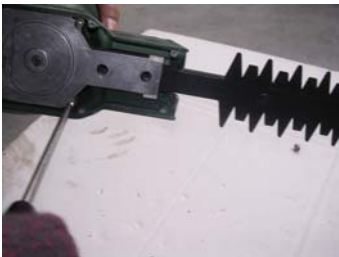

PIC H



PIC .I



PIC.J



PIC.K



PIC, L

V. OPERATION

OPERATING YOUR TELESCOPIC TRIMMER

ADJUSTMENT OF THE TELESCOPIC SHAFT

The Trimmer is packed with the telescopic shaft adjusted to its shortest position.

To begin with, release the shaft lock (please see page 2. Parts List - Part 6). Adjust the shaft to the desired position and then re-lock. See.Pic.1&2)

PIVOTING THE POWER HEAD

The Trimmer is equipped with a power head that pivots. The power head is able to pivot 90 Degrees. The power head has a pivoting knob which allows the head to rotate and lock into your desired position.

To pivot the power head, follow the instructions below :-

1. Push in the spring-loaded pivoting knob for cutting head. (See page 2. Parts List - part 3.)
2. Turn the knob to the desired cutting position and release. The position is locked when the knob springs back out and makes a click noise.

The trimmer's working range is 90 degrees.

ROTATING THE SHAFT

The Trimmer is equipped with a shaft that pivots.

To rotate the shaft, press the Pivoting Knob For Shaft (please see page 2. Parts List – part 4.) and then turn the shaft to the desired position.

STARTING THE TRIMMER

The Trimmer has a trigger lock out button on the auxiliary handle and trigger switch on the main handle. To turn the Trimmer on, you need to press the trigger switch by one hand (please see page 2. Parts List – part 11) and press the trigger lock out button (please see Page 2. Parts List – part 8.) with the other hand at the same time.



PIC.1



PIC.2



Pic.3



Pic.4



Pic.5



Pic. 6



Pic. 7



Pic. 8



Pic. 9

USING THE TRIMMER

The Trimmer is a dual-purpose tool. It is designed to trim and shape tall, hard-to-reach hedges and bushes with its extended reach and pivoting head. You can also adjust the Trimmer to trim and shape smaller hedges and shrubs near the ground without having a bend or stoop.

OPERATING POSITIONS

To use the Trimmer for trimming low-lying foliage or ground cover, hold the Trimmer at the position

shown in Pic 6

To use the Trimmer for trimming tall, hard-to-reach hedges or shrubs and in particular, the tops of hedges, hold the trimmer at the position shown in PIC 7. Pivot the power head to several different positions to shape or sculpt shrubs or hedges.

To use the Trimmer for trimming smaller hedges or shrubs, hold the Trimmer at the positions shown in Pic. 8

To use the Trimmer for trimming the bottoms and sides of hedges and shrubs, hold the Trimmer at the position shown in Pic. 9

VI. CLEANING, MAINTENANCE AND STORGE

WARNING: Disconnect Trimmer from power supply before cleaning or servicing. Severe injury or death could occur from fire, electrical shock, or body contact with moving cutter blades.

WARNING: When cleaning Trimmer

Do not submerge Trimmer in any liquids

Do not use products that contain Ammonia, Chlorine, or abrasive.

Do not use chlorinated cleaning solvents, Carbon Tetrachloride, Kerosene, or Gasoline.

Use a soft cloth dampened with a mild soap and water mixture to wipe Trimmer pole, housing, and cutter blades clean. Do not spray or pour water directly onto Trimmer.

Once the Trimmer is cleaned, apply a high coat of oil to the cutter blades to prevent rust and provide lubrication.

MAINTENANCE AND STORAGE OF TRIMMER

1. Maintain Trimmer With Care

- Keep cutting edge sharp and clean for best performance and to reduce the risk of injury.
- Periodically apply a light coat of oil to the cutter blades for lubrication.
 - Inspect Trimmer cord periodically, and if damaged, have it repaired by an authorized service facility.
 - Inspect extension cords periodically and replace if damaged.
 - Keep handles dry, clean, and free from oil and grease.

2. Check Damaged Parts

- If a part is damaged, carefully check the damaged part before using the Trimmer. Make sure the part will operate properly and perform its intended function. If necessary, please contact the place of purchase to request a replacement part. There may be a charge.
 - Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other condition that may affect its operation.
3. When servicing Trimmer, use only identical replacement parts.
 4. When not in use, store your trimmer :
 5. in a dry location
 - out of the reach of children
 - away from chemicals and petrol

GUARANTEE:

This product is designed for domestic use only and guaranteed as such against faulty workmanship for a period of 12 months from date of purchase.

Your statutory rights remain unaffected.

This product is imported and distributed by T2 Direct Ltd -London



For more great gardening products please visit www.technologyinthehome.com